



WIRING INSTRUCTIONS: Hookup of a Carbon Monoxide PPM Detector to the 5851008 Emergency Shutoff System


www.concoa.com

1-800-225-0473

Fail-Safe Wiring (Will Alarm if Detector Loses Power)

Connect A3 "NO" to "CONTACT" terminal of appropriate input on 585 1008. Refer to CONCOA ADI # 99065850.

Connect A1 "C" to "+12 VDC" terminal of appropriate input on 585 1008. Refer to CONCOA ADI # 99065850.

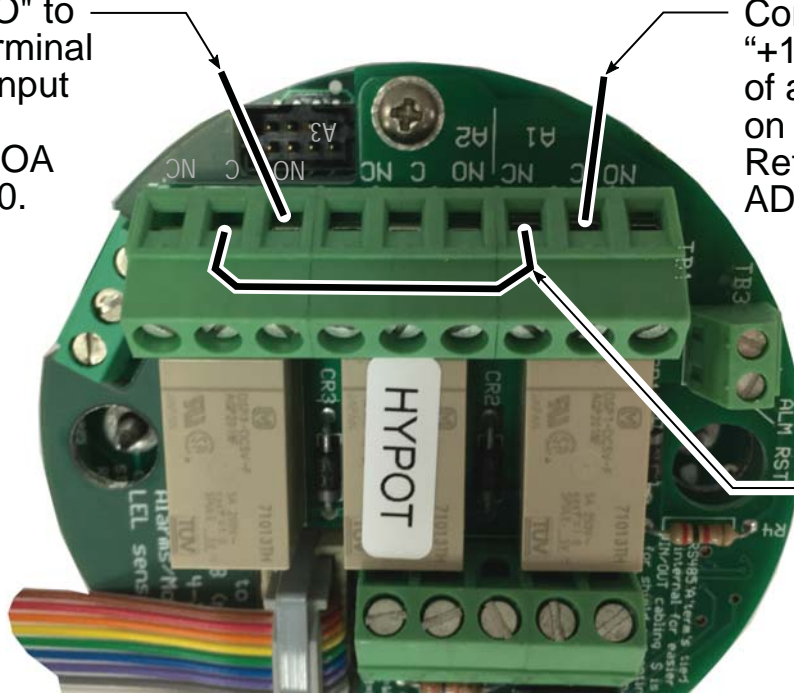

Jumper: A1 "NC" to A3 "C"

Minimum Wiring

Connect A1 "NC" to "CONTACT" terminal of appropriate input on 585 1008. Refer to CONCOA ADI # 99065850.

Connect A1 "C" to "+12 VDC" terminal of appropriate input on 585 1008. Refer to CONCOA ADI # 99065850.

